

 
KeySOLVE Quick Programming Guide (500 – 1500 key capacity)

There are 3 different levels of key fob:

1. **Programming** fob (the first fob seen by the unit on power up)
2. **Manager** fob (reviews log, allows lock-out, & snib options)
3. **User** fob (allows access only)


Add Key Fobs –



 

Offer the PROGRAMMING FOB to the reader and press the top button the display will show  Press the top button to move **up** through the numbers or the bottom button to Move **down** through the numbers. Having a red light in the top left hand corner and bottom right hand corner of the display identifies occupied key slots. Select an unoccupied slot and offer the new fob to the reader. The reader will beep and the display will indicate the slot is occupied. The new fob is now allocated to that number slot. To come out of programming wait for 20 seconds and the system will return to normal operation.

Delete Key Fobs




–Offer the PROGRAMMING FOB to the reader and press the bottom button the display will show  Press the top button to move **up** through the numbers or the bottom button to move **down** through the numbers. Having a red light in the top left hand corner and bottom right hand corner of the display identifies occupied key slots. To delete a key fob offer the programming key fob to the reader and these corner lights will go out indicating that the slot is now vacant. To come out of programming wait for 20 seconds and the system will return to normal operation.

Set Up Managers - Offer the PROGRAMMING FOB to the reader and press the

bottom button the display will show  now offer the PROGRAMMING FOB to the reader again and the display will show  This means “set limits” and will determine the number of “manager keys” recognised by the system. (All systems are supplied with no managers set up) To set up say 10 managers press the top button until the number 10 is flashing in the display and offer the PROGRAMMING FOB again, the system will exit programming and key slots 1 through to 10 are now “manager key fobs”.

 
View History



– Offer a **manager** fob to the reader and hold either top or bottom button for 4 seconds. Display will show  Now press the bottom button and view the last user number to use the system. Press bottom button again to view each previous user and so on to a maximum of 256 users. Press the top button or wait for 10 seconds and the system will come out of history log and revert to normal use.


Snib Option- -



- Offer a **manager** fob to the reader and press top button the system will beep and the display will show  The system will now allow the door to be opened without the need for a key fob to be used. Repeat the procedure to cancel the option.

Lock Out Option-



Offer a **manager** fob to the reader and press the bottom button the system will beep and the display will show  The system will now allow only manager fobs to access the system. Repeat the procedure to cancel the option.