


BRACKETS AND ACCESSORIES

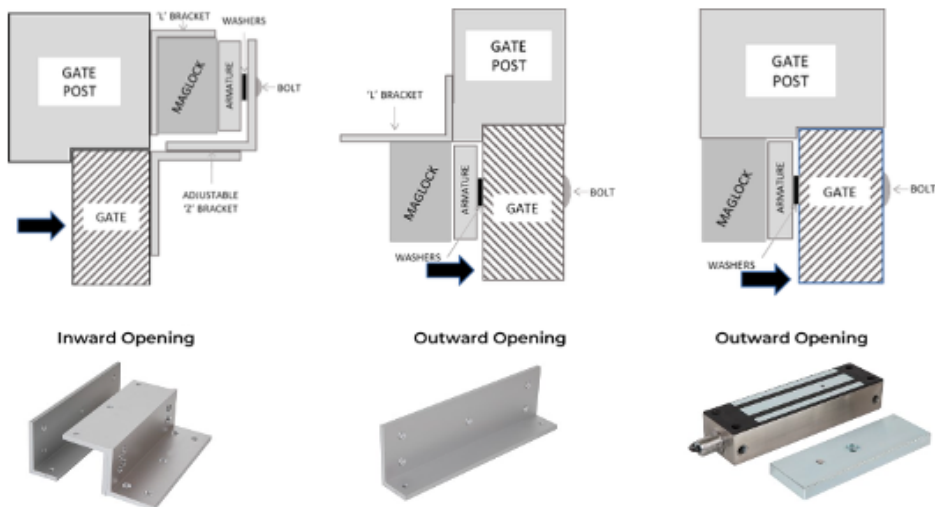

Have you got the correct brackets & Accessories?

IMPORTANT REMINDERS

- Handle the equipment with care, damaging the surface of the magnet or armature plate may reduce locking efficiency
- The magnet is mounted rigidly to the door frame, whereas the armature plate must be mounted to the door using the items provided to allow it to pivot about its centre. This allows it to compensate for door wear and misalignment.
- The template must be used with the door in its normally closed position (Outward opening only)

TROUBLE SHOOTING

1. Reduced Holding Force

- Poor contact between magnet and armature (check placement)
- Armature if fitted too tightly to door/bracket
- Wrong voltage being used or product wired incorrectly (12V vs 24V)
- Check the voltage coming into the lock, if lower than expected check correct cable is being used (we recommend alarm cable - not Cat5/6 or telephone cable)

2. Door not Releasing


- Ensure the degaussing pin on armature is set correctly - use allen key on rear of armature to adjust. Turn clockwise to make pin spring stronger.

3. No Power at Lock

- Check power supply is working correctly
- Check cables are properly connected



600-GATE Dimensions

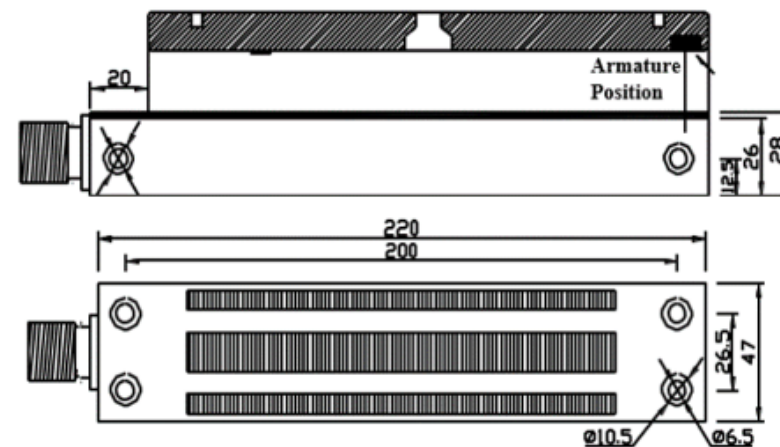

1200-GATE Dimensions

