

Easy-Fix Sign Banding Instructions

Step 1

Insert the two piece saddle into the sign's channelling. If your sign doesn't have channelling, SSP can supply retro-fit rails




Step 2

Feed the banding through the saddle and out of the other side, creating a loop

Step 3

Feed the banding through its screw clip at the rear of the post

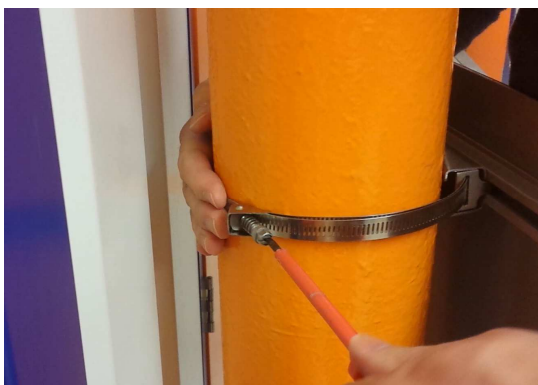

Step 4

Finally, clip the screw into position and tighten. Repeat for the other strip of channelling and the sign will hold its own weight