

Adhesive Backed Sign Channeling

Step 1

Make sure the rear of the sign is clean, flat and free from dust, grease, moisture and dirt

Step 2


Lie sign on face, making sure it is not on a surface that will damage the graphics

Step 3

Without taking backing off the channelling, put channelling in position on the back of the sign. Dependent on the sign, the top piece should be 10cm (4 inches) in from the top and the other strip 10cm in from the bottom of the sign.

Step 4

Using your judgment, draw a line along the channelling

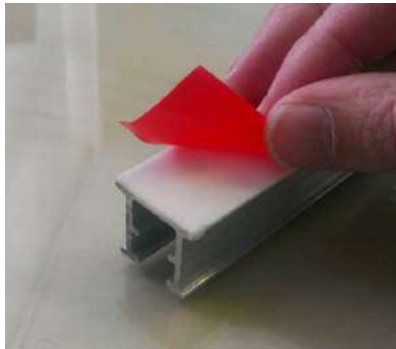

Step 5

Stand sign up and use a spirit level to double check the two lines you have drawn are level

Step 6

Peel backing of first strip of channelling and place firmly in position along the guidelines you drew.



Step 7

Hold in place for 15 seconds



Step 8

Repeat for second piece of channelling

Step 9

Leave overnight for the channelling to properly bond to the sign