

Installing the SSP UPVC Wireless Door Entry System


Step 1

Using screws or sticky pads, attach the keypad to your door or architrave. Ensure that the unit is close enough to the door to be able to use the keypad properly.




Step 2

Remove the euro cylinder key barrel from the door, leaving the latch and handles in place. Slide in the new barrel (supplied) with the battery compartment on the outside of the door. Test by inputting the access code to the pad and turning.

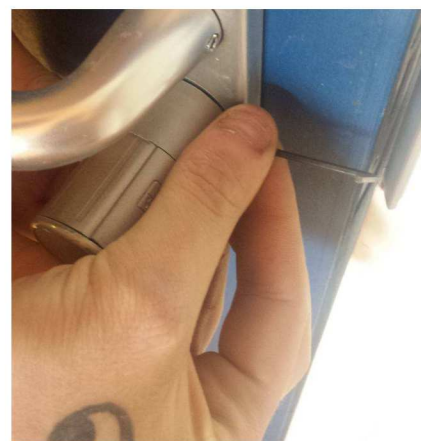

Step 3

Lock the new barrel in place using the grub screw and Allen Key provided. Using the keypad, you should now be able to operate the door.

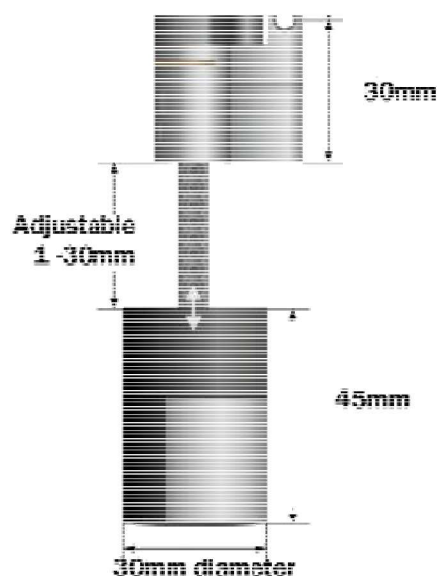

Notes

- Before ordering, please check your cylinder using the diagram left to ensure the wireless entry system is suitable.
- For simplicity, it's best to set up your pin codes once installed.