


INSTALLATION OF K510 & T511 COVER SERIES

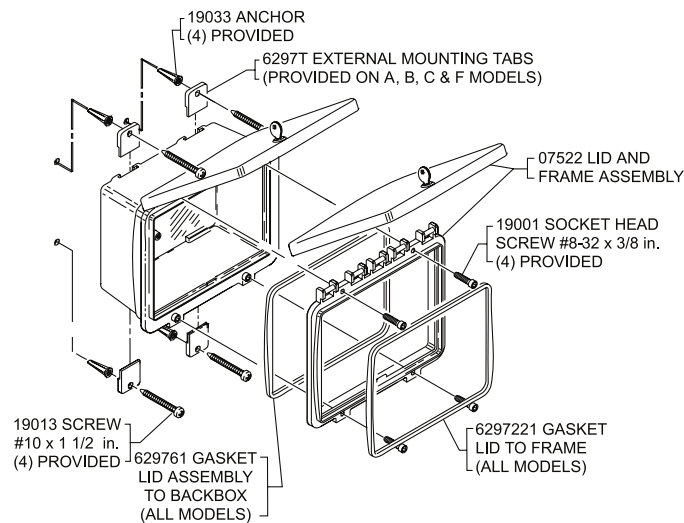

TYPICAL INSTALLATION

Internal dimensions of all six enclosures are 8.50 in. (216mm) wide and 6.37 in. (160mm) high. For depth dimensions, see pictorial views.

INSTALLATION PROCEDURE


1. Insert the (4) mounting tabs into the backbox slots with A, B, C, and F models.
2. Using the installed mounting tab holes or internal mounting bosses as a template, mark and drill (4) 1/4 in. diameter holes and complete installation as shown.

CLEANING INSTRUCTIONS


Rinse with water to remove abrasive dust and dirt. Wash with soap or mild detergent, using a soft cloth. **(Do not scrub or use brushes or abrasives.)** Rinse once more, then dry using a soft cloth or chamois.

To remove grease or wet paint, rub gently with a cloth wetted thoroughly with naphtha **(do not use razor blades or gasoline)**. Then wash and rinse.


**K510A WITH KEY LOCK
T511A WITH THUMB LOCK**
SEALED BACKBOX WITH EXTERNAL MOUNTING

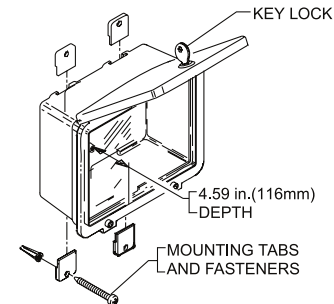


**K510B WITH KEY LOCK
T511B WITH THUMB LOCK**
SEALED BACKBOX WITH EXTERNAL MOUNTING AND MOLDED DOUBLE GANG OUTLET BOX

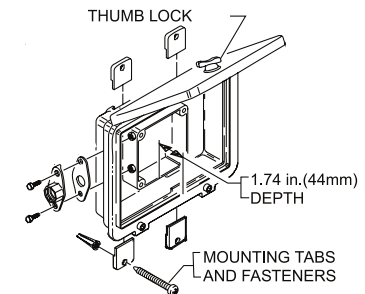


**K510C WITH KEY LOCK
T511C WITH THUMB LOCK**
OPEN BACKBOX WITH EXTERNAL MOUNTING

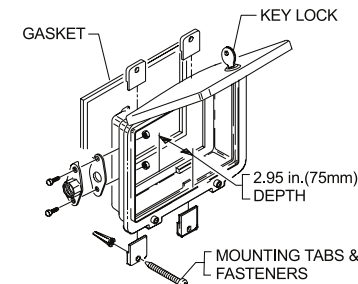

**K510D WITH KEY LOCK
T511D WITH THUMB LOCK**
OPEN BACKBOX WITH INTERNAL MOUNTING

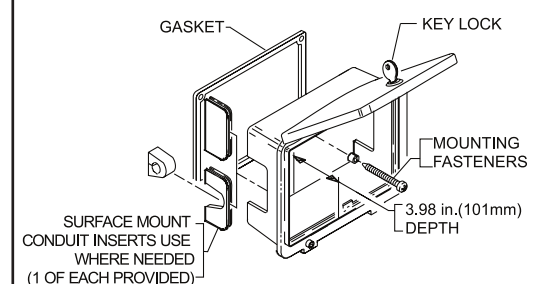

**K510E WITH KEY LOCK
T511E WITH THUMB LOCK**
OPEN BACKBOX WITH INTERNAL MOUNTING

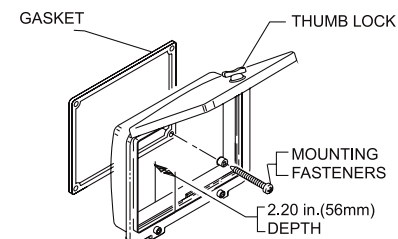

**K510F WITH KEY LOCK
T511F WITH THUMB LOCK**
SEALED BACKBOX WITH EXTERNAL MOUNTING

