



Covers with Spacers for Extra Depth

1.

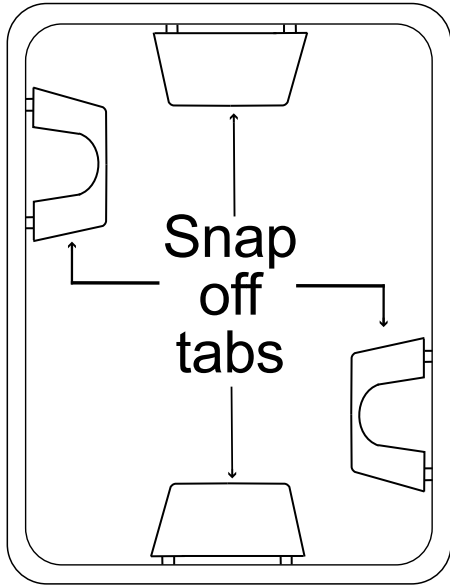

2. Use tabs to either block off gap entirely



or reduce size of hole for wires to pass through



3. To fix to wall, thread screws through both the frame and spacer

